

anko

Instruction Manual



Keycode: 43157129
2.4Ghz Wireless Mechanical Keyboard

Packing: //////////////////////////////////////

61keys Mechanical Keyboard, USB-C Cable ,Keyboard Receiver

CAUTION: //////////////////////////////////////

1. This product shall be supplied by a power source not exceeding PS1 only.
2. The battery in product is non-replaceable. Danger of explosion if battery is incorrectly replaced.
3. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
4. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
5. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
6. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
7. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
8. The ambient temperature for normal operating is 25°C.
9. The label marking on bottom enclosure.
10. Noted: Please charge the battery in time when it runs out or it will affect the battery life.
11. Turn off the switch when the keyboard is no longer use. Please charge the battery for every 2 months.

How to use: //////////////////////////////////////

1. Plug the receiver into the computer USB port.
2. Switch the on/off switch at the back of keyboard.
3. Start to use the keyboard.

The keyboard compound key functions are controlled as follows: //////////////////////////////////////

FN+Esc	
FN+Shift+Esc	~
FN+1	F1
FN+2	F2
FN+3	F3
FN+4	F4
FN+5	F5
FN+6	F6
FN+7	F7
FN+8	F8
FN+9	F9
FN+0	F10
FN+"- _"	F11
FN+"=+"	F12

FN+A	Play/Pause
FN+S	Previous Track
FN+D	Next Track
FN+F	Decrease The Volume
FN+G	Increase The Volume
FN+H	Mute
FN+U	PrtScr SysRq
FN+I	Scroll Lock
FN+O	Pause Break
FN+J	Insert
FN+K	Home
FN+L	Page Up
FN+M	Delete
FN+,<	End

FN+.>	Page Down
FN+ ←	Lighting Effect Switch (Total Eight Effects)
FN+] }	Increase The Brightness
FN+[{	Decrease The Brightness
FN+' "	Faster The Light Effect
FN+; :	Slower The Light Effect
FN+/?	↑
FN+Alt	←
FN+⌋⌌	↓
FN+Ctrl	→
FN+WIN	Lock/Unlock WIN
FN+V	2.4G Reconnect Receiver

FN+V(2.4G):When keyboard does not match the receiver: Long press the FN+V until the light flashes, then plug the receiver into the computer to match the code.

